 



①



Legs - 1 pc

⑧

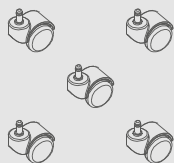

Wheels - 5 pcs

②



Seat cushion - 1 pc

⑨



Decorative cover - 2 pcs

③




Back bracket - 1 pc

⑩



Snap fastening - 1 pc

④

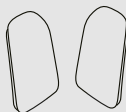


Backrest - 1 pc

⑪



Knop - 6 pcs

 ⑤



Pneumatic rod - 1 pc

A



Allen wrench (M6) - 1 pc

⑥




Foot - 1 pc

B



Bracket screw M6x20 - 4 pcs

⑦

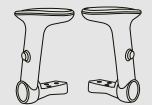


Handrails - 2 pcs

C




Handrail screw M6x30 - 6 pcs

STEP 1

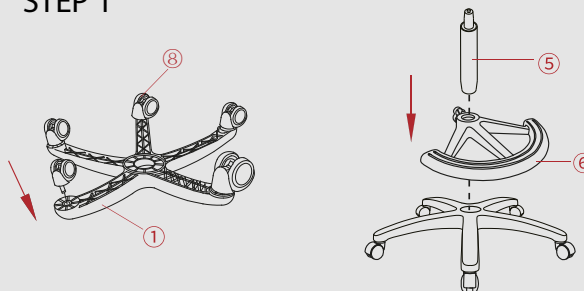


Insert the 5 wheels into the holes of the chair legs and insert them firmly into place, and then install the air pressure rod and footrest into the chair legs.

STEP 3

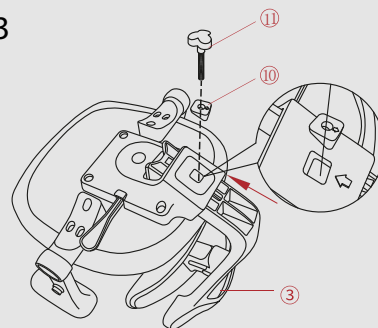


Secure the back bracket behind the cushion and tighten with snaps and knobs.

STEP 5

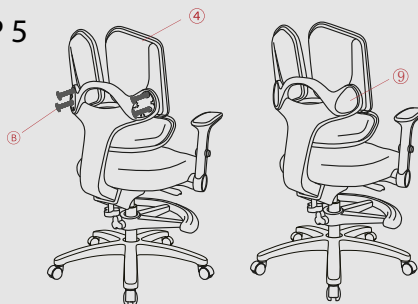


Install the backrest on the back bracket and tighten it with two screws and attach the decorative cover, and the installation is complete.

STEP 2

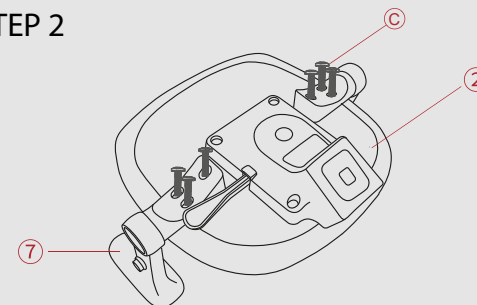

Install the left and right armrests on the cushions, lock the three armrest screws and tighten them tightly.

STEP 4

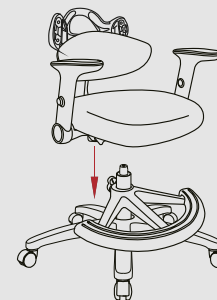

Insert the seat cushion into the air pressure lever on the foot of the chair

STEP 6

